



Get to know your Tovala

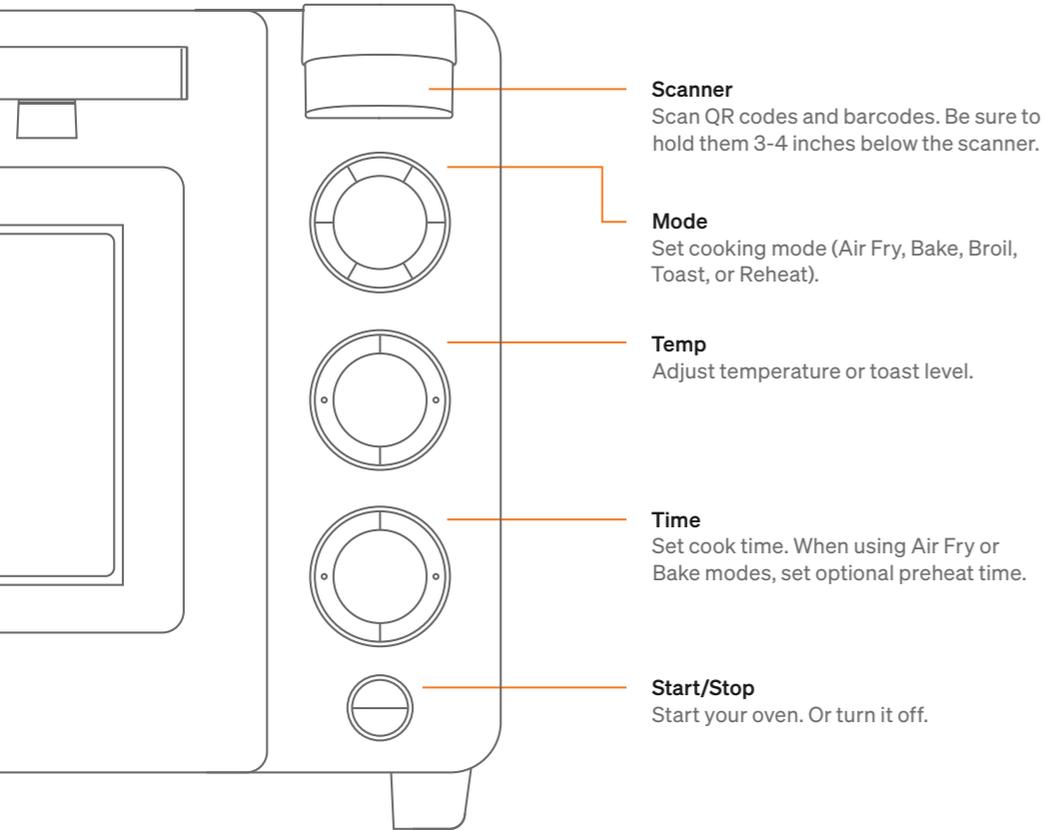


Get Tovala Meals delivered.
Then scan, relax, enjoy.

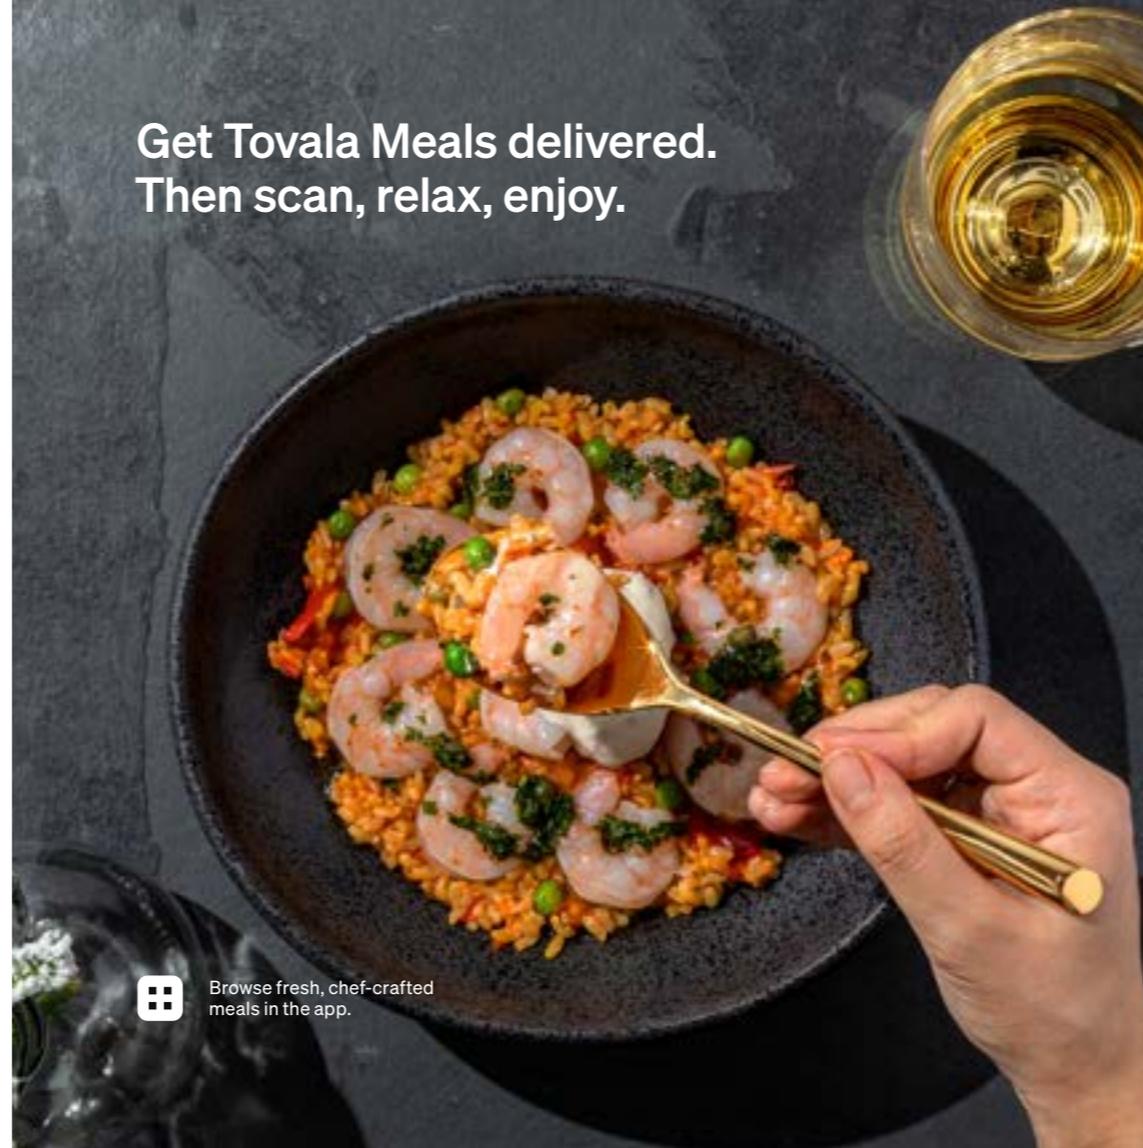


Quick Start Guide

Follow these setup steps

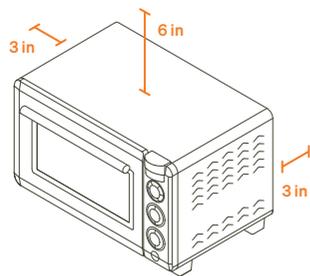


01 Place your oven on a level and sturdy surface near a dedicated GFCI outlet. Leave open space between your oven and any surface: 3 inches around the back and sides, and 6 inches from the top.

02 Remove all plastic and packaging. Throw out the silica packs found inside your oven.

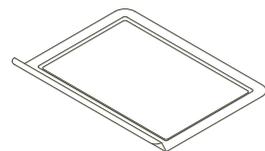


03 Be sure to remove the plastic from the crumb tray (found on the bottom of your oven's interior). Then, slide the crumb tray back into place under the heating elements.

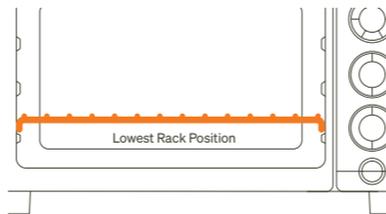

04 Slide the oven rack into the lowest rack position, curved edges facing down. Unless otherwise stated, keep your rack in this position.

05 Plug your oven into a GFCI outlet. Be sure that nothing else is plugged into that outlet. Do not plug your oven into an extension cord or power strip.

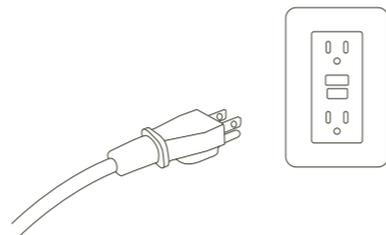

06 Download the Tovala App and connect your oven to WiFi in the Settings tab. Without WiFi, your oven won't be able to scan or communicate with the app.

07 Before cooking anything, wash the air fry basket and sheet tray with warm, soapy water. Rinse and dry thoroughly then place in the oven with the sheet tray on the oven rack and air fry basket in the middle rack position. Set your oven to Bake at 450°F for 20:00. During this cleaning, you may detect smoke or smell burning. This is normal during your oven's first use.

You're all set.

Wondering what to make first? Try a recipe card or any recipe in the app.

Want to learn more?

See the user manual included with your oven for important safety information, detailed operating instructions, and cleaning tips.

Need help?

Talk to us at tovala.com/contact